




**1**  
Slide Repeller to bottom of Holster sleeve.

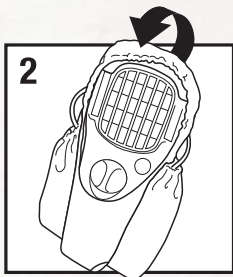

**2**  
Pull Holster hood over top of Repeller.

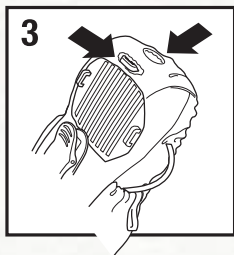

**3**  
Align Repeller ignition viewing window with the hole in the hood.

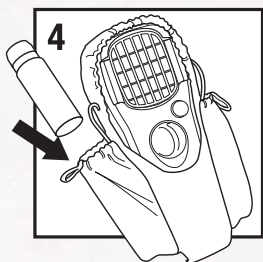

**4**  
Insert spare cartridges and mats into side pouches.

### Proper Use

- Keep Repeller in the OFF position during transport.
- Repeller works best on a flat stable surface with grill facing up.
- Ensure Holster does not cover up back vents.
- Do not let the Holster cover Repeller front grill.